

# QUICKSTART

## Leica DISTO™ D8



- |  |  |
|--|--|
| <p><b>Buttons</b></p> <ul style="list-style-type: none"> <li>1 ON / DIST (On/measuring)</li> <li>2 Digital Pointfinder</li> <li>3 Timer</li> <li>4 Plus (+)</li> <li>5 Minus (-)</li> <li>6 Area/volume</li> <li>7 Ind. measurement (Pythagoras)</li> <li>8 Trapezoid</li> </ul> | <p><b>Functions</b></p> <ul style="list-style-type: none"> <li>9 Functions Reference</li> <li>10 Storage/Memory</li> <li>11 Clear / Off</li> <li>12 Menu/Equal</li> <li>13 2<sup>nd</sup> for navigation</li> <li>14 Ind. measurement (inclination sensor)</li> <li>15 Bluetooth activate</li> <li>16</li> </ul> |
|--|--|

- when it has to be **right**

**leica**  
Geosystems



